

Drum Loading:

The ideal bracing is a 2x4 nailed to the floor, in front of these drums. A logistics bar will also work, provided it is attached to an appropriate track in the sidewall of the trailer. Ratcheting load locks will not provide any restraint when brakes are applied. No bracing is needed behind the front set of drums, they will not slide to the rear.


When loading the trailer please allow approximately 4 – 5 ft of empty space at the rear of the trailer. This is the optimal loading for weight distribution and allows the driver to equalize the load with sliding axles if available.

NOSE


TAIL

Approx. 16 ft.

Tote Loading Option 1:

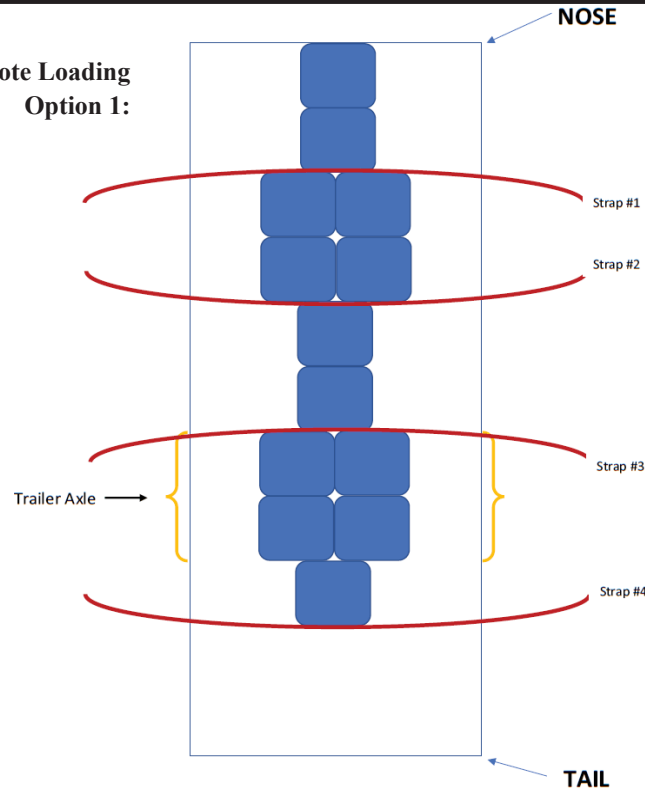

Tote Loading Option 2:

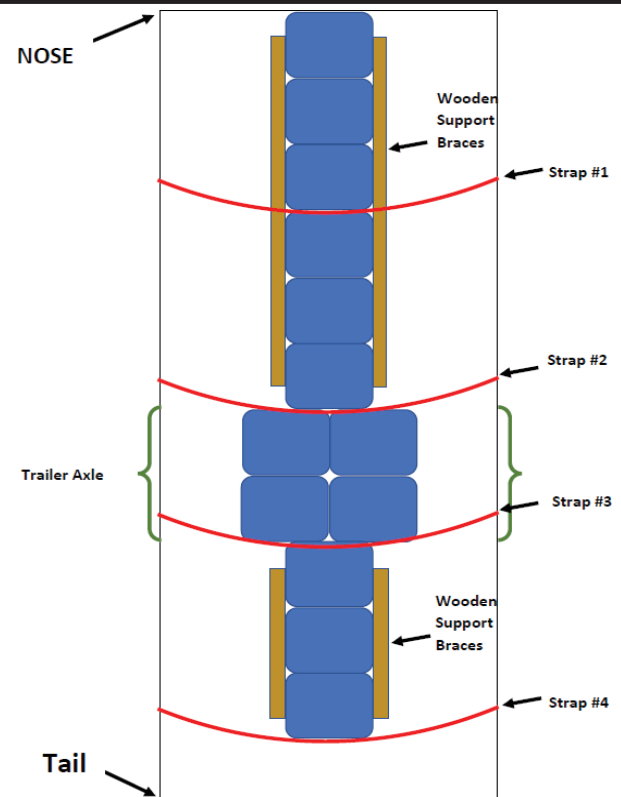

ALL IMAGES ARE
NOT A SCALE
REPRESENTATION